



Wingmaster® Anchor Extractor Features:

- Removes old cover anchors including anchors with escutcheons with the special design feature of the anchor extractor.
- Anchor Extractor available only in NANSK or NANSK2 kit.**



To remove safety cover anchors:



1. Thread anchor with tap



2. Turn stud in anchor



3. Place extractor over stud



4. Thread castle nut onto extractor.



5. Attach tool. Turn clockwise to remove anchor.



6. Place square tip of stud into tool to remove old anchor from extractor.



Part Number	Description	Ctn Qty	List Price
JS	Hardened Stud (For 10-15 pulls)	1	\$ 39.37
CN	Castle Nut	1	48.98



KEMB


KEMB - Wingmaster® Castle Nut Driver Features:

- Tightens and loosens Castle Nut (CN) with use of cordless screw gun.
- Used in the removal of safety cover anchors with the NANSK Kit.
- Works with 5/16 Tap for the tapping (threading) of cover anchors.

Part Number	Description	Ctn Qty	List Price
KEMB	Castle Nut Driver	1	\$ 141.34

Wingmaster® Shell Extractor Kit Features:

- Removes brass anchor shells - pop-up or threaded style.
- Includes SEW wrench, 11/16 tap and shell adapter.
- Wrench and tap available separately.
- Shell Adapter available only with NANSE kit.**

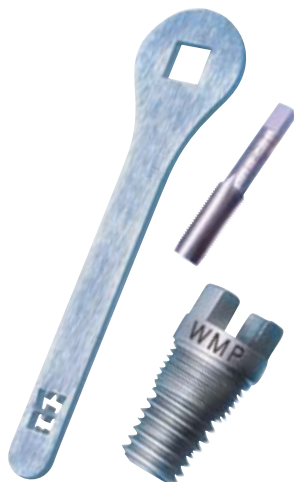

NANSE



1. Insert tap in pop-up shell to create threads (For threaded shell proceed to 2)



2. Thread adapter into shell



3. Thread stud in adapter 1/4"



4. Place tool on castle nut and turn clockwise to remove anchor

Part Number	Description	Ctn Qty	List Price
NANSE	Shell Extractor Kit	1	\$ 165.44
SEW	Shell Extractor Wrench	1	24.65
TAP1116	Tap 11/16	1	40.42